



# GORE® Joint Sealant



## Installation Instructions

GORE® Joint Sealant is ideally suited for large or complex steel flanges and equipment to achieve an incredibly tight seal. Available on a spool, the user can easily and quickly form a gasket in place on the flange, and achieve significant savings in material, labor, and lead-time over traditional large cut gaskets.

To install, please follow the instructions below:

### 1. Size Selection

**For flat face flanges, raised face flanges, and manways:**  
Measure the width of the sealing surface and reference the table below to select the nominal width of GORE® Joint Sealant.

Effective Sealing Width		GORE® Joint Sealant Nominal Width	
(mm)	(inches)	(mm)	(inches)
3-7	1/8-1/4	3	1/8
7-10	1/4-3/8	5	3/16
10-17	3/8-5/8	7	1/4
17-25	5/8-1	10	3/8
25-40	1-1.5	14	1/2
40-50	1.5-2	17	5/8
50-65	2-2.5	20	3/4
65+	2.5+	25	1

#### For tongue and groove flanges:

Select the nominal width of GORE® Joint Sealant that is equal to or less than the width.

### ATTENTION

Perform an engineering torque estimation to confirm a gasket stress higher than 17 MPa (2500 psi) can be achieved.

### 2. Installation – Standard & Custom Flanges


#### 2.1 Prepare the Flange

Open the flanges a minimum of 15 cm (6"). Completely clean the surface to ensure optimal adhesion. Remove all oil, graphite, and other residue.


#### 2.2 Apply Joint Sealant

Remove the adhesive backing a little at a time, to prevent the adhesive strip from picking up dirt. Position the end of the joint sealant around the starting bolt hole.


Figure 1

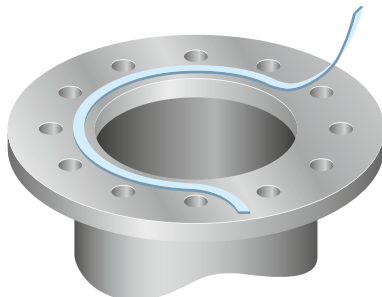


#### Standard Flanges Flat Faced

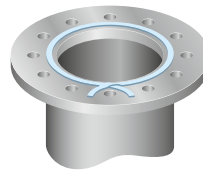


#### Standard Flanges Raised Faced

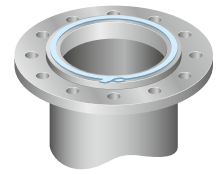

#### Fragile Flanges

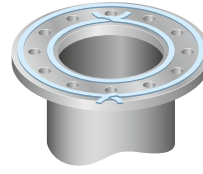


Option 1  
To prevent flange rotation.

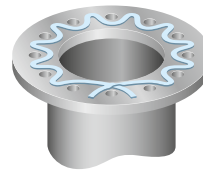


Option 2  
To minimize flange rotation.

#### Manways

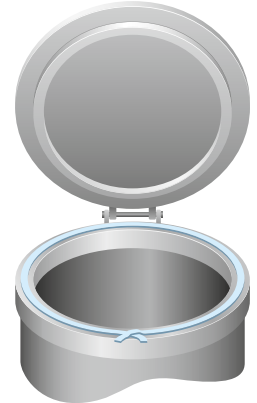

For self-energizing manways and access doors, please contact your local Gore representative for installation guidance.

#### Tongue & Groove

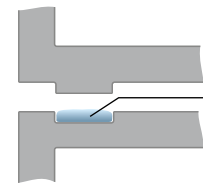

To ensure proper gasket compression, the tongue must be equal to or taller than the groove depth.

### ATTENTION

No additional anti-adhesives spray or liquid should be applied to the flange surfaces. In cold conditions, gently warm the joint sealant before installation to make the adhesive more sticky.

#### 2.3 Complete the Joint Sealant

Complete the gasket by overlapping both ends at the starting bolt hole and cut away excess material. See above illustrations.

### ATTENTION

The skive cut technique is recommended to complete the gasket when 17 mm (5/8") or wider GORE® Joint Sealant is being used, except when installed on ASME or JIS metallic flanges.



# GORE® Joint Sealant

## Installation Instructions

### 3. Installation – Joint Sealant with nominal width $\geq 17$ mm


#### 3.1 Skive Cut Technique

Some applications do not have enough force to compress the additional material at the overlap. This is usually the case for Joint Sealant with a nominal width  $\geq 17$  mm, therefore we always recommend the skive cut technique for these sizes. In general, the skive cut technique can always be used as an alternative to step 2.3. Repeat steps 2.1 to 2.2 but perform an initial and closing skive cut as described below.

#### 3.2 Initial Skive Cut

Unwind about 0.5 m (1.5 ft) of GORE® Joint Sealant. Cut the end with a sharp knife on a clean, firm surface using the skiving technique. In general, the length of the skive cut,  $l_s$ , should be approximately 25 mm (1").


Figure 2

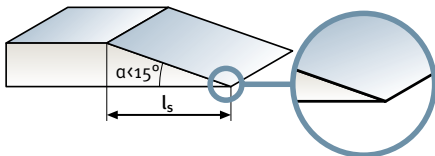

#### 3.3 Closing Skive Cut


Complete the gasket by laying the Joint Sealant over the skived end, extending beyond  $\approx 14$  mm (1/2"). To prepare for the second and final skive cut, identify and mark the starting and end points.

Figure 3

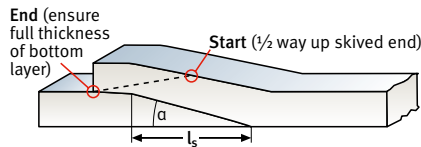

Cut away the gasket material at an angle. This will leave an area of  $\approx 120\%$  of the original gasket thickness.

Figure 4

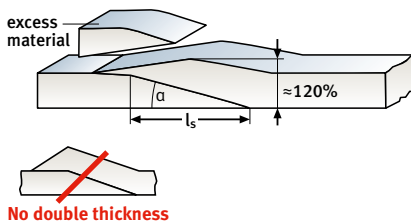

### 4. Torquing

#### 4.1 Select a Torque

As a general rule, it is advisable to make the best possible use of the available bolt force. However, the torque recommendations of the equipment manufacturer must be followed at all times.

#### 4.2 Flange Tightening Procedure

Unless the equipment manufacturer specializes a certain pattern, utilize the star pattern, multiple pass, and incremental torque. Refer to the ESA/FSA "Gasket Installation Procedures" for more detailed information on the recommended installation practices.

Should you have any further questions about installation, or about our gaskets in general, contact your local GORE representative.

FOR INDUSTRIAL USE ONLY.

Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.

Supplied by:

For a complete listing of local sales offices please visit [gore.com/sealants](http://gore.com/sealants)

#### North America / South America

**W. L. Gore & Associates Inc.** (USA)

Tel.: +1 800 654-4229 • Fax: +1 410 506-8585

E-mail: [sealants@wlgore.com](mailto:sealants@wlgore.com)

#### Europe / Middle East / Russia / Africa

**W. L. Gore & Associates GmbH** (Germany)

Tel.: +49 89 4612-2215 • Fax: +49 89 4612-43780

E-mail: [sealants\\_EU@wlgore.com](mailto:sealants_EU@wlgore.com)

#### Asia / Australia

**W. L. Gore & Associates** (China)

Tel.: +86 21 6247-1999 • Fax: +86 21 6247-9199

E-mail: [sealants\\_AP@wlgore.com](mailto:sealants_AP@wlgore.com)

All technical information and advice given here is based on our previous experiences and/or test results. We give this information to the best of our knowledge, but assume no legal responsibility. Customers are asked to check the suitability and usability in the specific application, since the performance of the product can only be judged when all necessary operating data are available. Specifications are subject to change without notice. Gore's terms and conditions of sale apply to the purchase and sale of the product.

GORE and designs are registered trademarks of W. L. Gore & Associates, © 2010 – 2013, W. L. Gore & Associates, Inc.

